

REMOVABLE BOLLARD STORAGE HOLDERS – 90MM & 140MM

Bolt-down floor holders that keep a removable bollard standing upright and out of the way whenever it's lifted out.

SW-SL90

SW-SL140

Removable bollards need somewhere to go when they're unlocked and lifted out of the ground — for example to let a forklift, truck or oversized load through a roller door. Drop the bollard into its storage holder and it stands upright against the wall, clear of the traffic path, instead of lying on the ground where it can be tripped over, scratched, dinged or lost. When you're ready to close up again, lift it out of the holder and drop it back into its in-ground socket and lock it. The holder bolts straight to the floor — no concrete work, core drilling or drainage.



SPECIFICATION	HOLDER 90MM	HOLDER 140MM
SKU	SW-SL90	SW-SL140
Suits bollard	Removable 90mm (SW-RB90)	Removable 140mm (SW-RB140)
Internal diameter	102mm	152mm
Wall thickness	4mm	4mm
Height	approx. 225mm	approx. 200mm
Base plate	150 × 105 × 5mm	155 × 205 × 5mm
Material	Carbon steel	Carbon steel
Fixing	4-hole base plate, masonry anchors (not included)	4-hole base plate, masonry anchors (not included)
Indicative price	\$25 / unit	\$35 / unit
Availability	In stock	In stock

CONSTRUCTION

- Carbon steel tube, 4mm wall, welded base plate
- Surface-mount accessory — bolts to the floor, not installed in-ground
- Sized to the matching removable bollard; 90mm and 140mm are not interchangeable
- No concrete, core drilling, drainage or cover plate involved

WHAT'S INCLUDED

- Storage holder with welded base plate
- Fixings (masonry anchors) not included
- Bollard sold separately — accessory only, suits SW-RB90 / SW-RB140

INSTALLATION (SUMMARY)

- Choose a spot clear of the traffic path — typically along the wall beside the door the bollard guards
- Mark the 4 base-plate holes on the floor
- Drill and fix with masonry anchors suited to the floor (fixings not included)
- Check the holder sits flat and stable before use

TYPICAL USES

- Garage and factory roller-door bollards removed for deliveries
- Loading docks where bollards come out for forklift or truck movements
- Any removable bollard install where the bollard needs a tidy, visible home when it's out

Accessory for SafeWise removable bollards SW-RB90 / SW-RB140 — not a stand-alone safety or delineation product. Dimensions are nominal, taken from manufacturing drawings. SafeWise supplies product only; installation is the responsibility of the purchaser or their contractor. Locate underground services before drilling into any slab.